Operating and maintenance instructions

BLÜCHER Channel® drainage channels in stainless steel



Comprising:

Channels type nos. 670, 671, 672 and 673

Water traps type nos. 502, 525 and 562

Filter basket type no. 780

Shower grating
Punched grating
Adjusted to the length of the channel
Annular grating
Adjusted to the length of the channel
Adjusted to the length of the channel
Adjusted to the length of the channel
Ladder grating
Adjusted to the length of the channel
Cast grating
Adjusted to the length of the channel



For the owner:

BLÜCHER Channel® drainage channel in stainless steel AISI 316L or optionally AISI 304 has been installed.

Prior to starting use:

- Check that the channel and the outlet have been cleaned leaving no concrete spills etc.
- Check that the water trap has been installed. If a filter basket is to be included, check also that this has been installed.
- In flexible sheet floors check that the clamping device has been properly fixed.
- Check that the type of grating chosen is suitable for the weight load required.

Normal operation:

BLÜCHER Channel® drainage channel in stainless steel has a removable water trap with excellent self-cleansing capabilities. In case of many impurities it may be necessary to clean the water trap at appropriate intervals.

Cleaning:

- Remove grating, filter basket and water trap.
- Clean water trap, filter basket and grating with detergent as necessary.
- Make sure that lubricant has been applied to the sealing ring of the water trap. Install the water trap applying a light pressure and twisting the water trap down to the stop ring in the drain. To avoid bad odours, make sure that the sealing ring of the water trap fits tightly to the drain.
- Replace filter basket and grating.

Technical data:

Specification of the product range and technical information are available as catalogues.